




Dell Inspiron 15R 5520 Hard Drive Replacement

how to replace hard drive


Written By: zAj

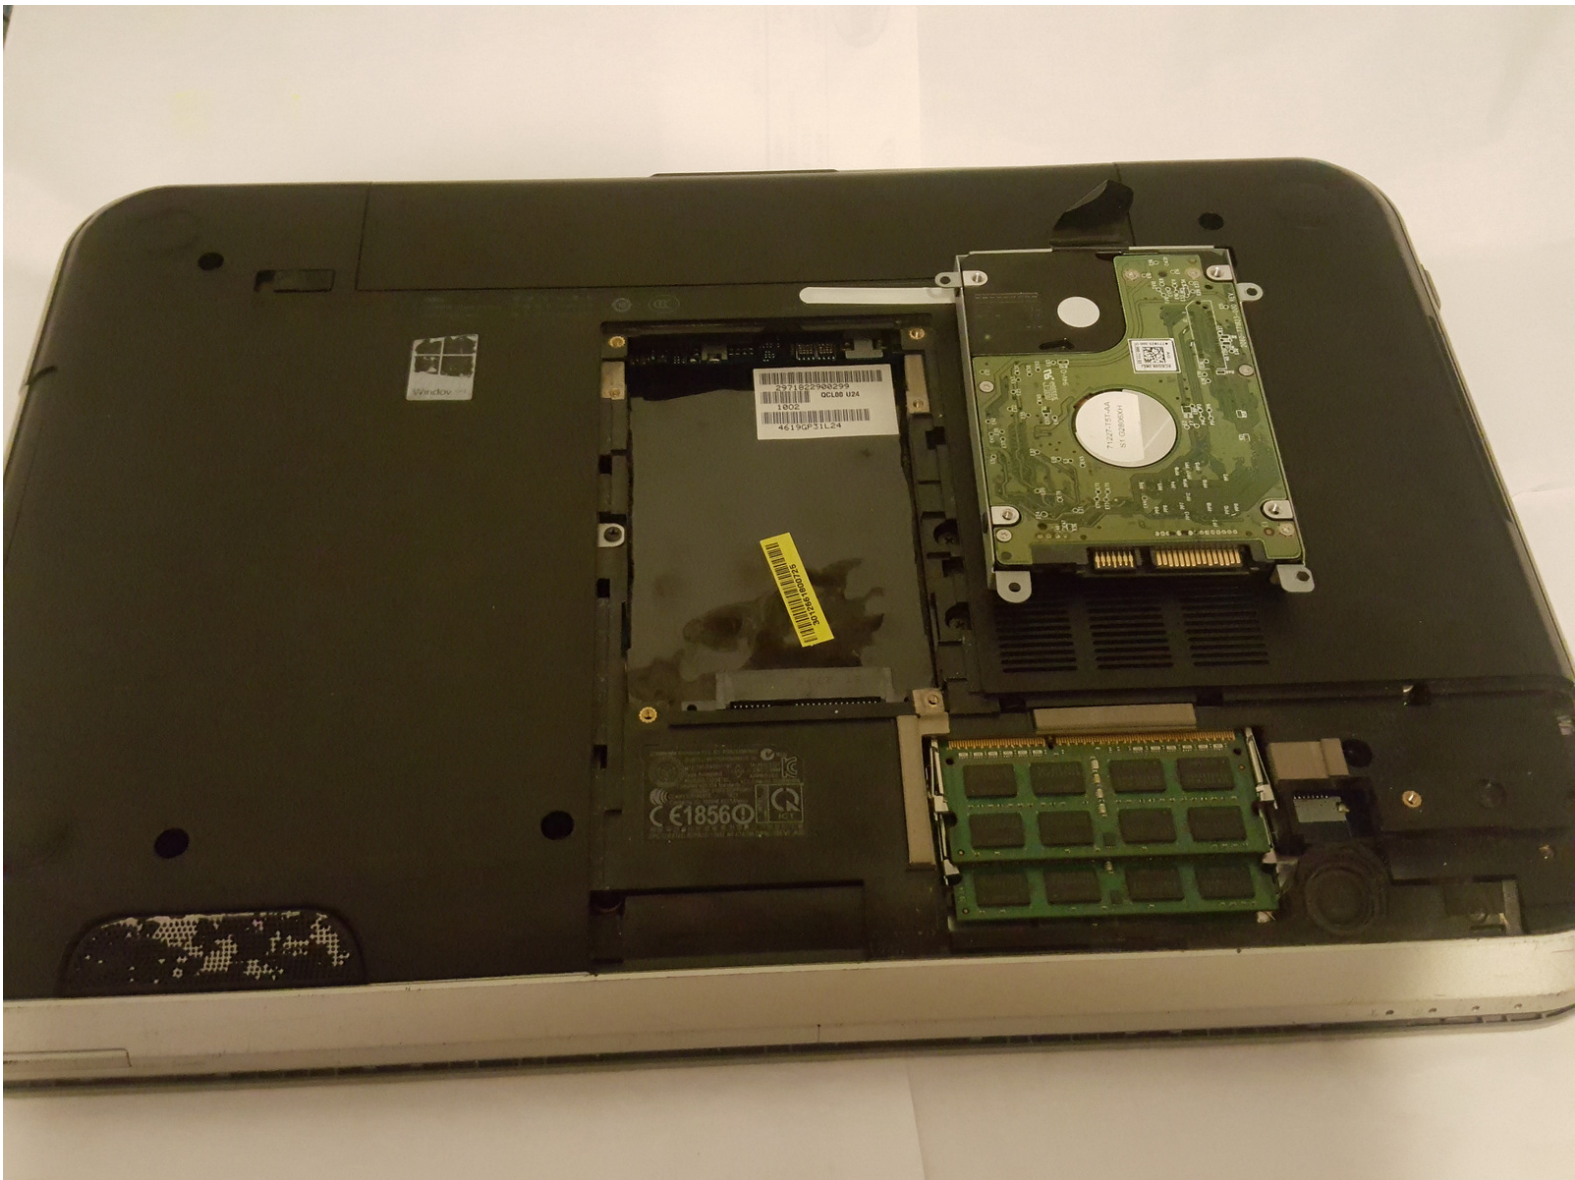


INTRODUCTION

Replacing or upgrading your laptops hard drive is a great way to get some extra life out of your device.


Step 1 — Battery

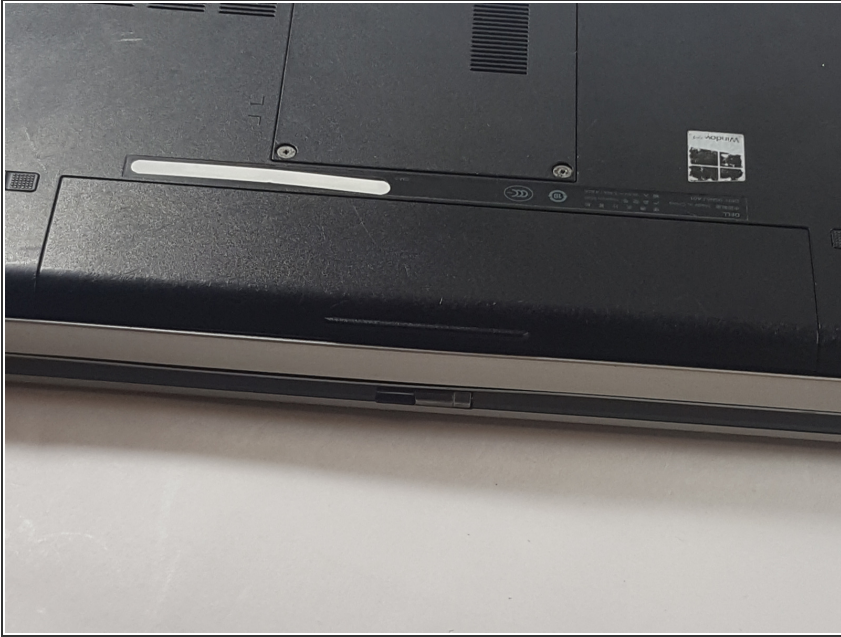

 We are removing the battery to avoid the possibility of an electrical discharge when working with this system.


- Flip device on its back displaying the battery.

Step 2

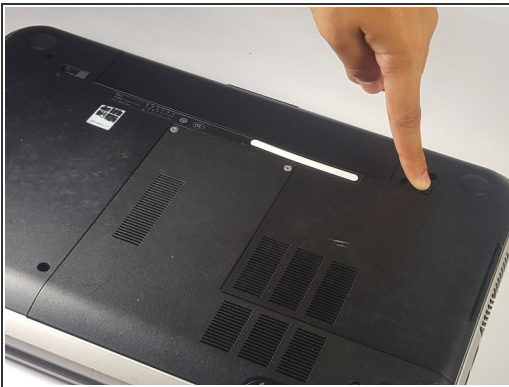



- Place a finger on both latches and push outwards.
- Grab by the lip and pull upwards to remove battery.

Step 3 — Hard Drive

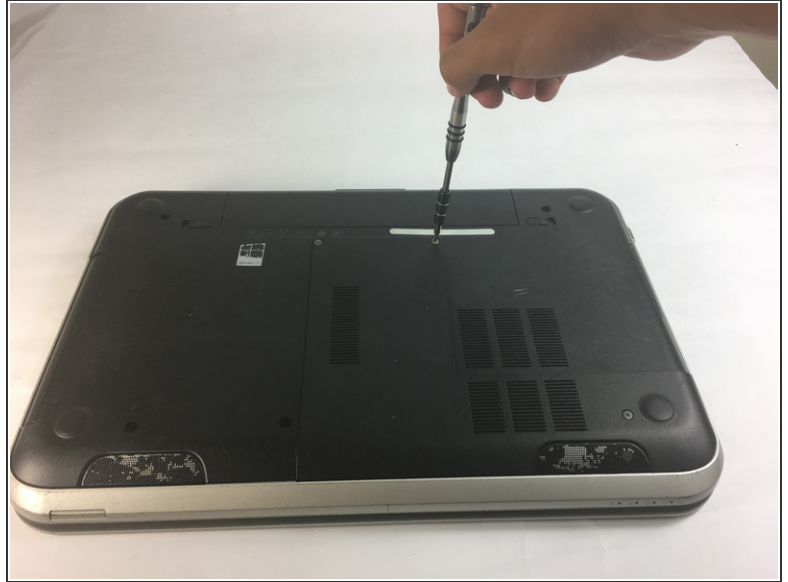


- Locate and loosen the three 3 mm screws.
- Remove the plastic casing with the screws attached.

Step 4

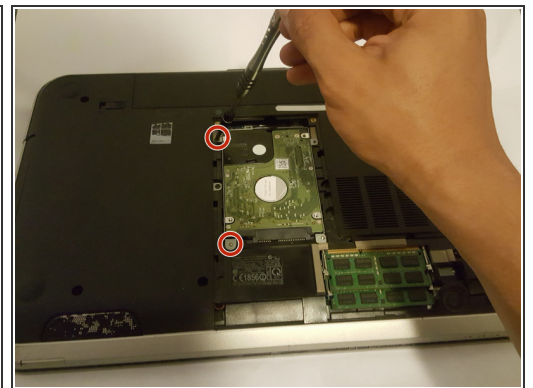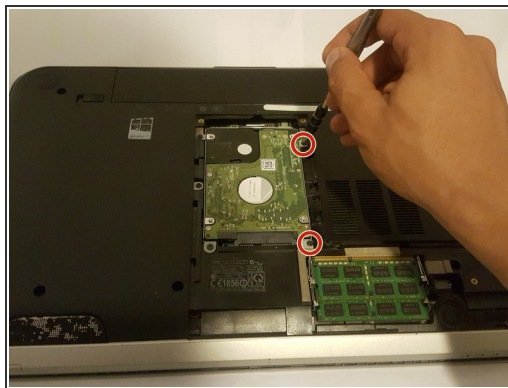

- Locate and remove the four 4mm screws holding the drive in place.

Step 5

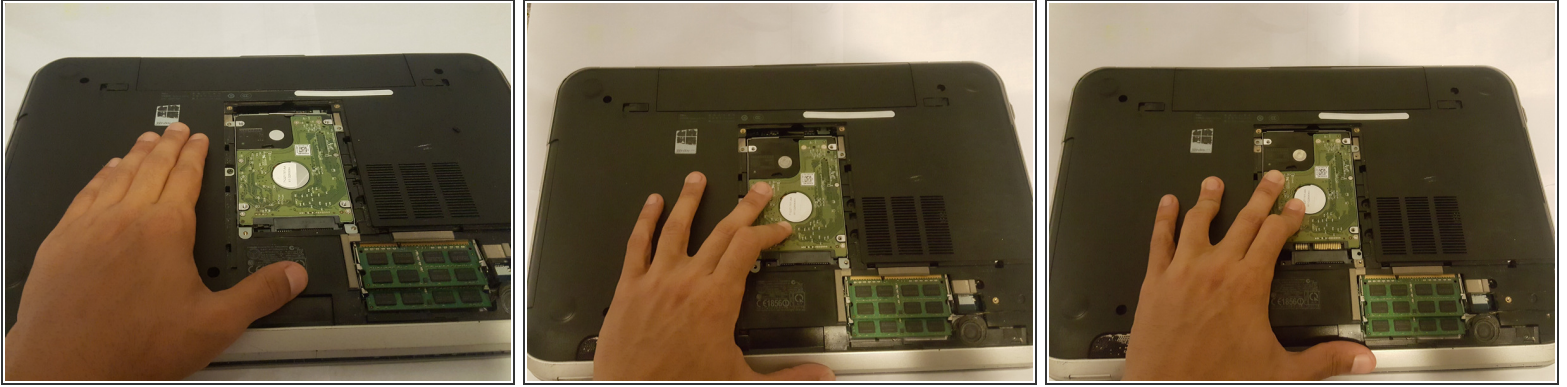

- Push the drive horizontally and away from yourself.

Step 6



- Lift the drive up and out of the bay.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-20 07:20:57 PM.